

FieldSmart® Fiber Distribution Point (FDP)

36, 96 & 144 Port Indoor Wall Box

Installation Manual



CLEARFIELD



FieldSmart® Fiber Distribution Point (FDP)

36, 96 & 144 Port Indoor Wall Box

Installation Manual



Table of Contents

Application	3
Description	3
Technical Specifications	3
Indoor Wall Box Component Views	4
Wall Box Installation	7
Wall Box Access	8
Cable Preparation and Installation	9
Grounding	11
Sealing the Wall Box	11
Fiber Splicing	12
Jumper Installation	14
PON Splitter Installation	15
Connector Cleaning Procedure	17
Standard Warranty	20
Proprietary Notice	21
Technical Support	21



FieldSmart® Fiber Distribution Point (FDP)

36, 96 & 144 Port Indoor Wall Box

Installation Manual

Application

The FieldSmart Fiber Delivery Point (FDP) Indoor Wall Box has been optimized for MDU (Multi Dwelling Unit) applications. With the Clearview® Cassette at its heart, the FieldSmart FDP Wall Box gives service providers plug-and-play integration based upon the configuration requirements of their application. With the ability to house one to three 1 x 32 splitters and a compact footprint, indoor wall boxes are perfect for the deployment of PON-based FTTH networks in an MDU environment. Additional applications include fiber demarcations, entrance facilities and security systems (CCTV).



Description

The FieldSmart Fiber Delivery Point (FDP) Indoor Wall Box is Clearview optimized, allowing the user to easily scale from 12 to 36, 96, or 144 ports. Designed from conception to provide fast and easy fiber jumper routing with ease of access to all circuits, the FieldSmart FDP Wall Box system is craft-friendly, keeping the installer's needs for quick deployment, intuitive use and ease of maintenance as the top priorities. Utilizing Clearview Cassettes, the product is shipped loaded with the industry standard adapter of choice and can be configured for patch only, patch and splice and MPO plug-and-play applications, while supporting all cable constructions for the inside plant. It is ring cut or mid-span capable, allowing for the distribution cables to be daisy-chained and for fiber hand-off through the riser. The wall box has a swinging bulkhead for rear-access to the cassettes and protects sub-unit slack storage, security enabled doors for extra protection and a solid enclosure to protect fiber terminations from damage. Designed from conception to provide fast, easy fiber jumper routing and ease of access to all circuits, the wall box system is craft-friendly, keeping the installer's needs for quick deployment, intuitive use and ease of maintenance as the top priority.

Technical Specifications

	36 Indoor	96 Indoor	144 Indoor
Dimensions	10.5" H x 16.0" W x 5.5" D	15.0" H x 27.5" W x 11.5" D	24" H x 26" W x 8" D
Port Density	Up to 36 ports	Up to 96 distribution ports and 12 feeder ports	Up to distribution 144 ports and 24 feeder ports
Splitter Capacity	N/A	Up to 6 Ruggedized Splitters	Up to 9 Ruggedized Splitters
Splice Capacity	12 or 24 splice configurations in each Clearview Blue Cassette		
Storage Capacity	Up to 5 meters of 12-fiber IFC jacketed fiber		
Cassette Types Supported	Clearview® Classic and Clearview Blue		
Connector Types	SC/UPC, SC/APC, LC/UPC, LC/APC, FC/UPC, FC/APC, ST/UPC, MPO		
Cable Types	Indoor Riser, Indoor Plenum, Indoor/Outdoor		
Material	18 gauge cold rolled steel (almond powder coating)		

FieldSmart® Fiber Distribution Point (FDP)


36, 96 & 144 Port Indoor Wall Box

Installation Manual



Indoor Wall Box Component Views

36 Port Indoor Wall Box

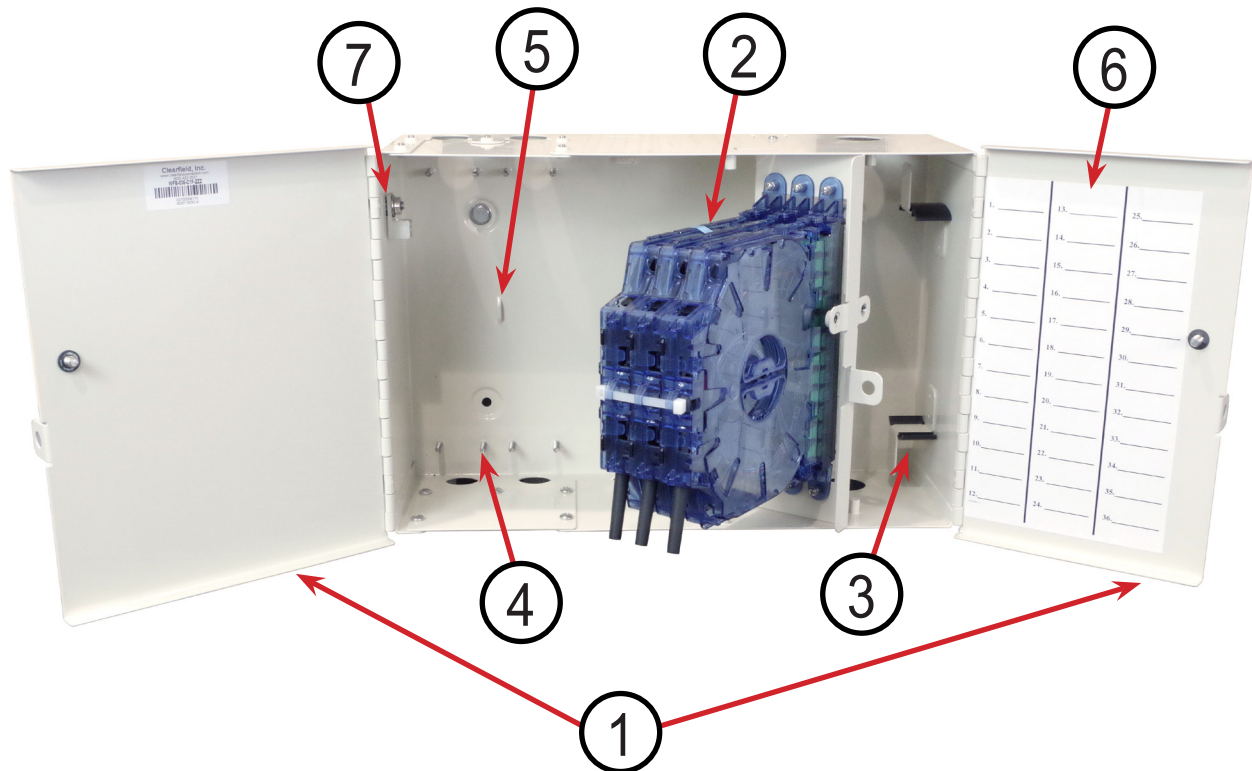

1. Security Access Doors
2. Clearview Blue Cassettes
(Left Exit for Patch and Splice)
3. Slack Storage for Jumpers
4. Cable Clamp Locations (Top and Bottom)
5. Bridge Lances for Securing Buffer Tube Slack
6. Designation Card
7. Ground Lug




FieldSmart® Fiber Distribution Point (FDP)

36, 96 & 144 Port Indoor Wall Box

Installation Manual

96 Port Indoor Wall Box

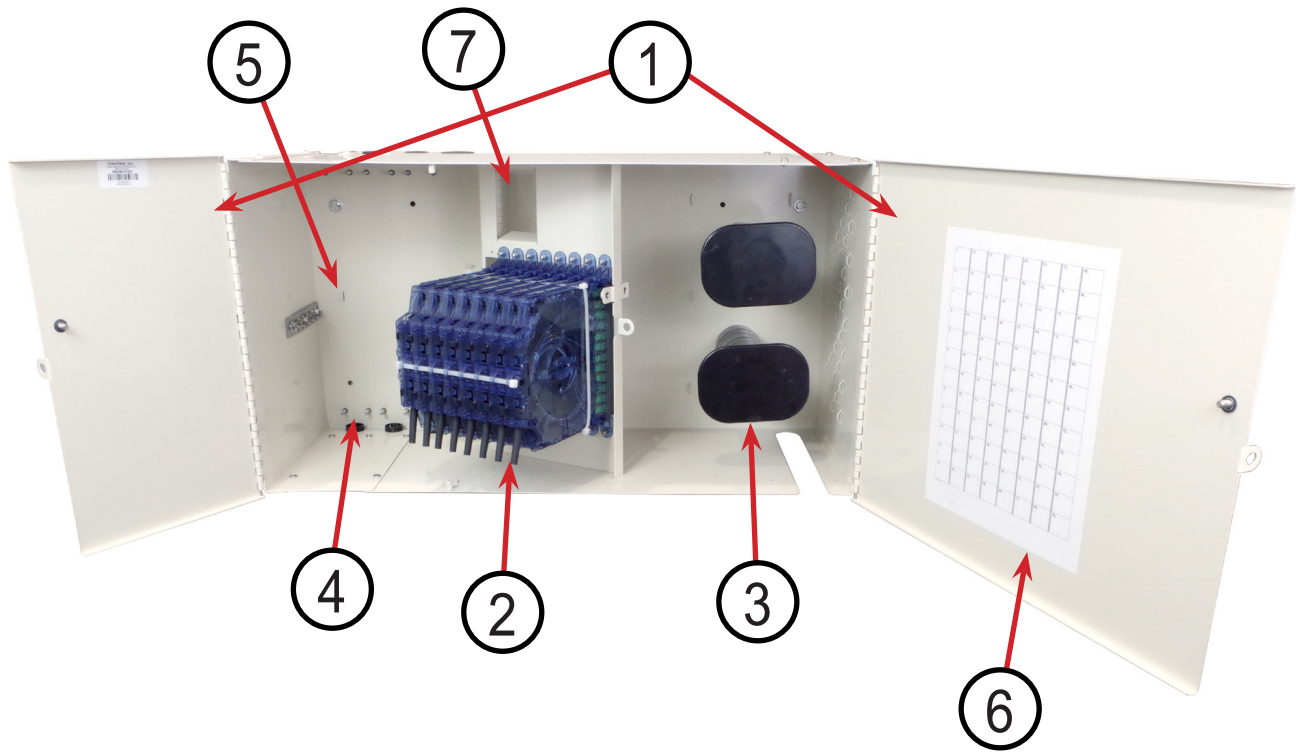

1. Security Access Doors
2. Clearview Blue Cassettes
(Left Exit for Patch and Splice)
3. Slack Storage for Jumpers or Splitter Legs
4. Cable Clamp Locations (Top and Bottom)
5. Bridge Lance for Securing Buffer Tube Slack
6. Designation Card
7. Staging Plate Area
8. Ground Bar


FieldSmart® Fiber Distribution Point (FDP)

36, 96 & 144 Port Indoor Wall Box

Installation Manual



144 Port Indoor Wall Box

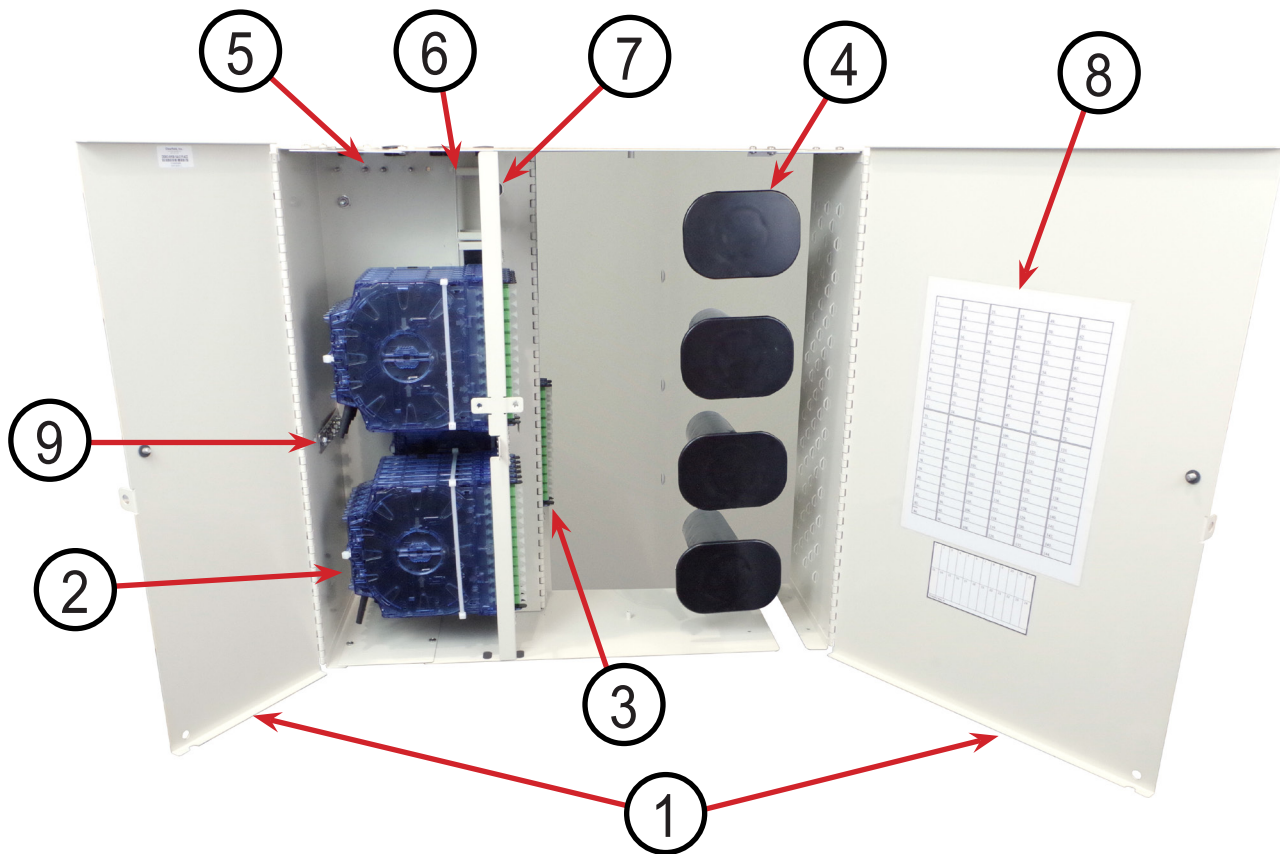

1. Security Access Doors
2. Distribution Cassettes
3. Feeder Cassettes
4. Radius Limiting Spools
5. Cable Clamp Locations (Top and Bottom)
6. Splitter Cage
7. Staging Plate Area
8. Designation Card
9. Ground Bar



FieldSmart® Fiber Distribution Point (FDP)


36, 96 & 144 Port Indoor Wall Box

Installation Manual

Wall Box Installation


1. The wall box is installed via the 4 holes located in the rear of the enclosure.

Mounting Holes

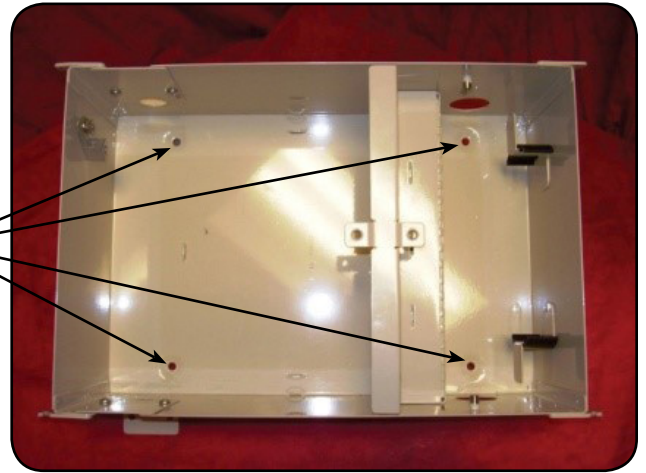


2. Hold the wall box up to the mounting surface and mark the hole locations with a marker.

Note: A level may be used to ensure that the wall box is mounted straight.

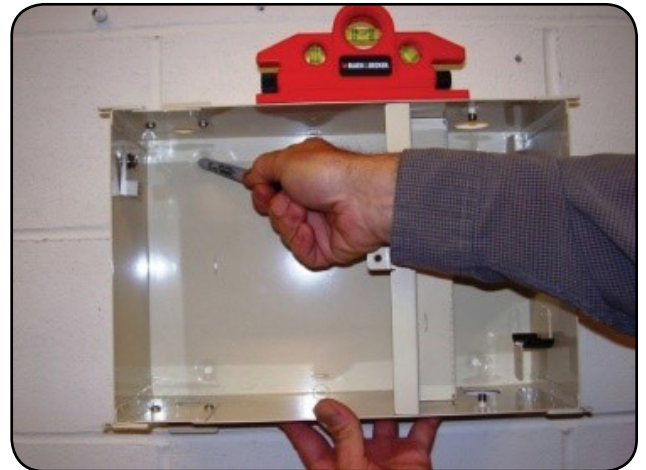

3. Pilot holes can then be drilled at each mark. Using appropriate fasteners for the material, attach the wall box to the surface.

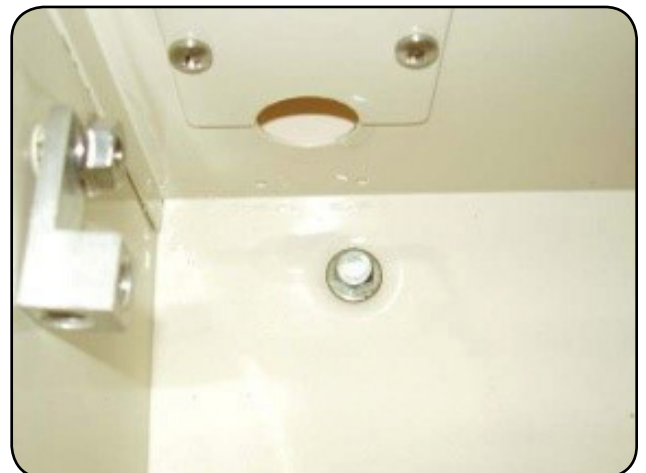

FieldSmart® Fiber Distribution Point (FDP)

36, 96 & 144 Port Indoor Wall Box

Installation Manual



Wall Box Access

1. The interior of the wall box can be accessed by loosening the security screws on each of the two doors using a 7/16" thin wall socket or a telecommunications industry "can wrench".



Note: The door on the right provides access to the distribution ports and the jumper slack storage, while the door on the left is used to access the splicing compartment.

2. The cassette splicing area can be locked by pressing in the tabs at both the top and bottom of the wall box, and can then be opened again by pressing the tabs back and swinging the bulkhead open.





FieldSmart® Fiber Distribution Point (FDP)


36, 96 & 144 Port Indoor Wall Box

Installation Manual

Cable Preparation and Installation

1. The slack storage compartment of the wall box is large enough to accommodate 15 feet of buffer tube slack from a cable matching the wall box port count. However, it is recommended that you only prep as much cable as you will need to perform your work.

Note: You will need approximately 3 feet of fiber inside the splice tray so add that to the total prep length.

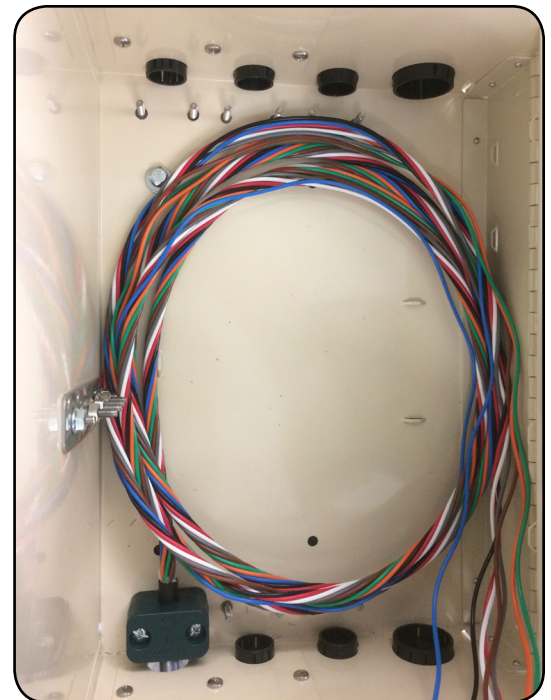

2. The splicing side of the indoor wall box will accommodate a cable that is prepped in either a ring cut/mid-span opening fashion or at the end of the cable.

Note: An OSP cable is shown in the picture, but an IFC tight buffer cable can be used as well. If a shielded cable is used, a bonding clamp 3M 4460-D or equivalent can be used.



Ring Cut/Mid-span



End of Cable Opening

3. In order to install cable in the splicing side of the wall box, the feed through plate will need to be removed by removing the screws holding it in place.





FieldSmart® Fiber Distribution Point (FDP)

36, 96 & 144 Port Indoor Wall Box


Installation Manual



4. Locate the green cable clamp shells and corresponding barrel nuts from the ship-along hardware.
5. The cable clamp shells are used in same size pairs. Avoid using a clamp that is too small and does not easily close around the cable. Use the next larger clamp and grommet tape. The provided grommet tape should be applied to one or two of the clamp shells prior to installation, depending upon the size of the cable.

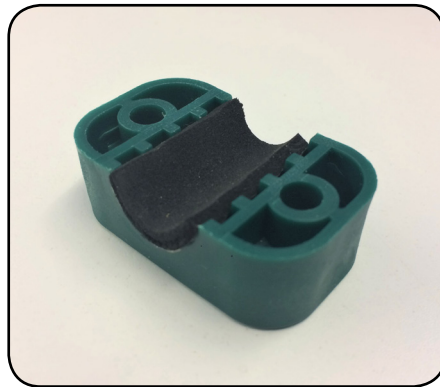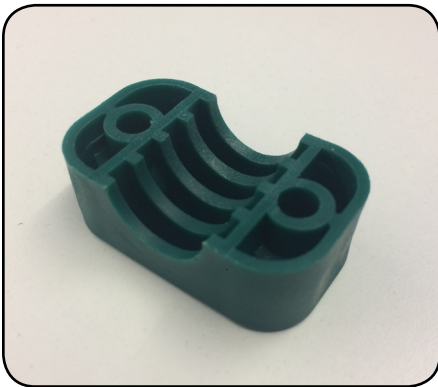

6. Use the included barrel nuts and cable clamp shells to fasten the cable to the wall box on the threaded studs inside the wall box. The cable should be mounted so that the breakout is slightly beyond the end of the clamp shell. After mounting the cable, replace the feed through plate with the same screws.

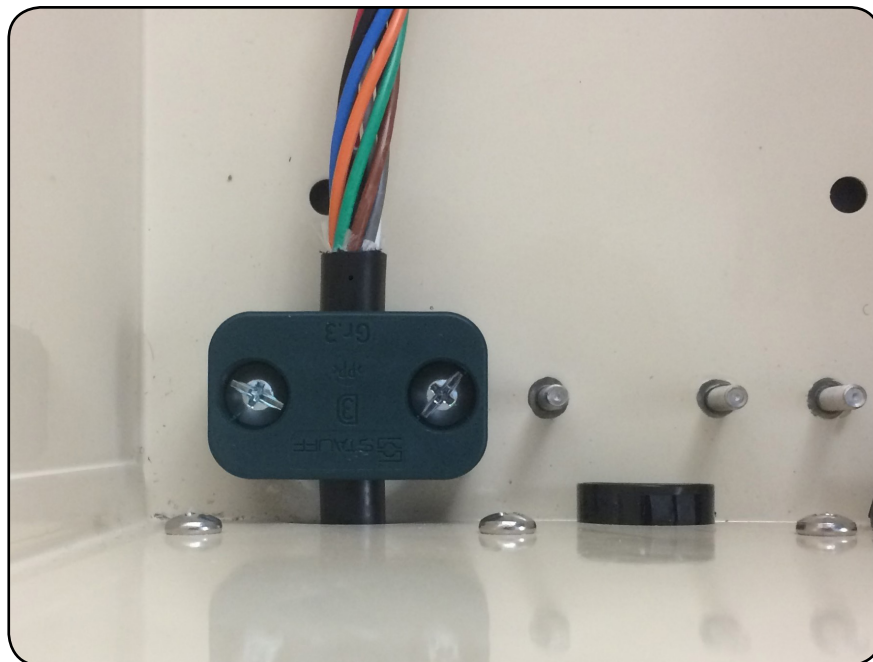



FieldSmart® Fiber Distribution Point (FDP)

36, 96 & 144 Port Indoor Wall Box

Installation Manual


Grounding

The wall box and all associated cables can be grounded to the provided ground lug/ground bar. Ground according to your local practices.



Sealing the Wall Box

The unused holes in the housing of the wall box can be sealed using the included plugs.

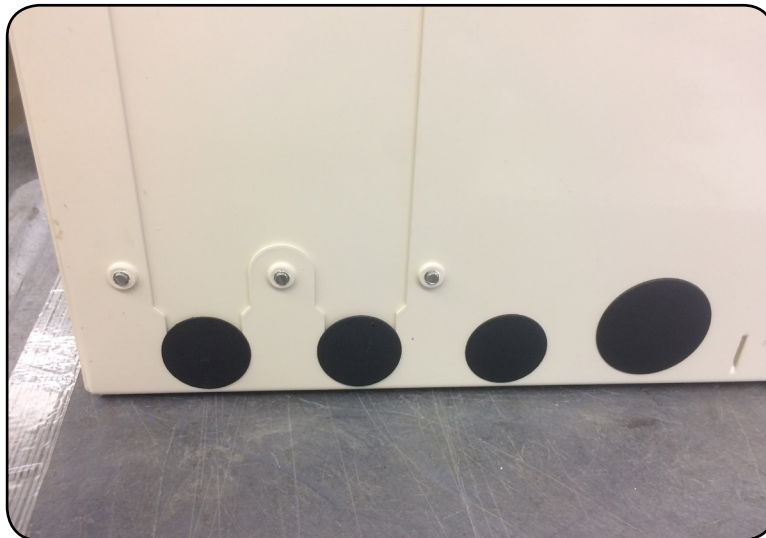

FieldSmart® Fiber Distribution Point (FDP)


36, 96 & 144 Port Indoor Wall Box

Installation Manual



Fiber Splicing

1. Route the buffer tube to be spliced in the slack storage area and up to the cassette to be spliced.
2. Mark the tie off point of the cassette with a marker. Make sure to leave around 3 feet of extra buffer tube after the mark to allow for slack in the cassette's splice tray.

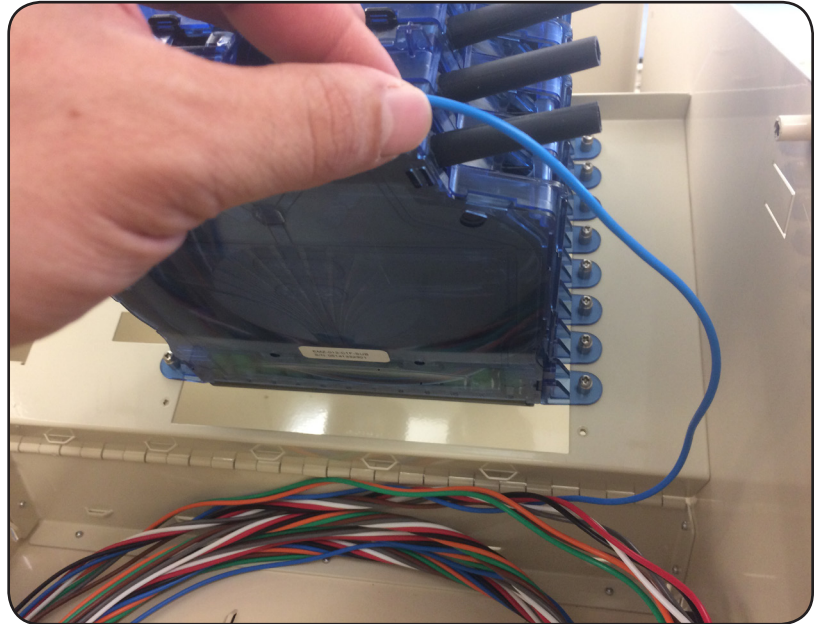

3. **Remove** all Clearview Blue Cassettes from the wall box that need to be spliced. This can be done by opening the bulkhead and loosening the captive screws on each side of the cassette which hold the cassette to the bulkhead.



4. Consult the Clearview Blue Cassette Installation Manual for splicing instructions, located under the Resources tab of the Clearfield website, www.seeclearfield.com.

Viewable here:

<https://www.seeclearfield.com/assets/documents/installation-manuals/clearview-blue-cassette-install-manual.pdf>




FieldSmart® Fiber Distribution Point (FDP)

36, 96 & 144 Port Indoor Wall Box

Installation Manual

5. After splicing is complete, return the cassettes to the wall box and store the buffer tubes, securing them with the provided Velcro and bridge lances.

Note: Secure the sweep of the buffer tubes up to the cassette by utilizing the bridge lances on the bulkhead as well as the floor of the wall box.

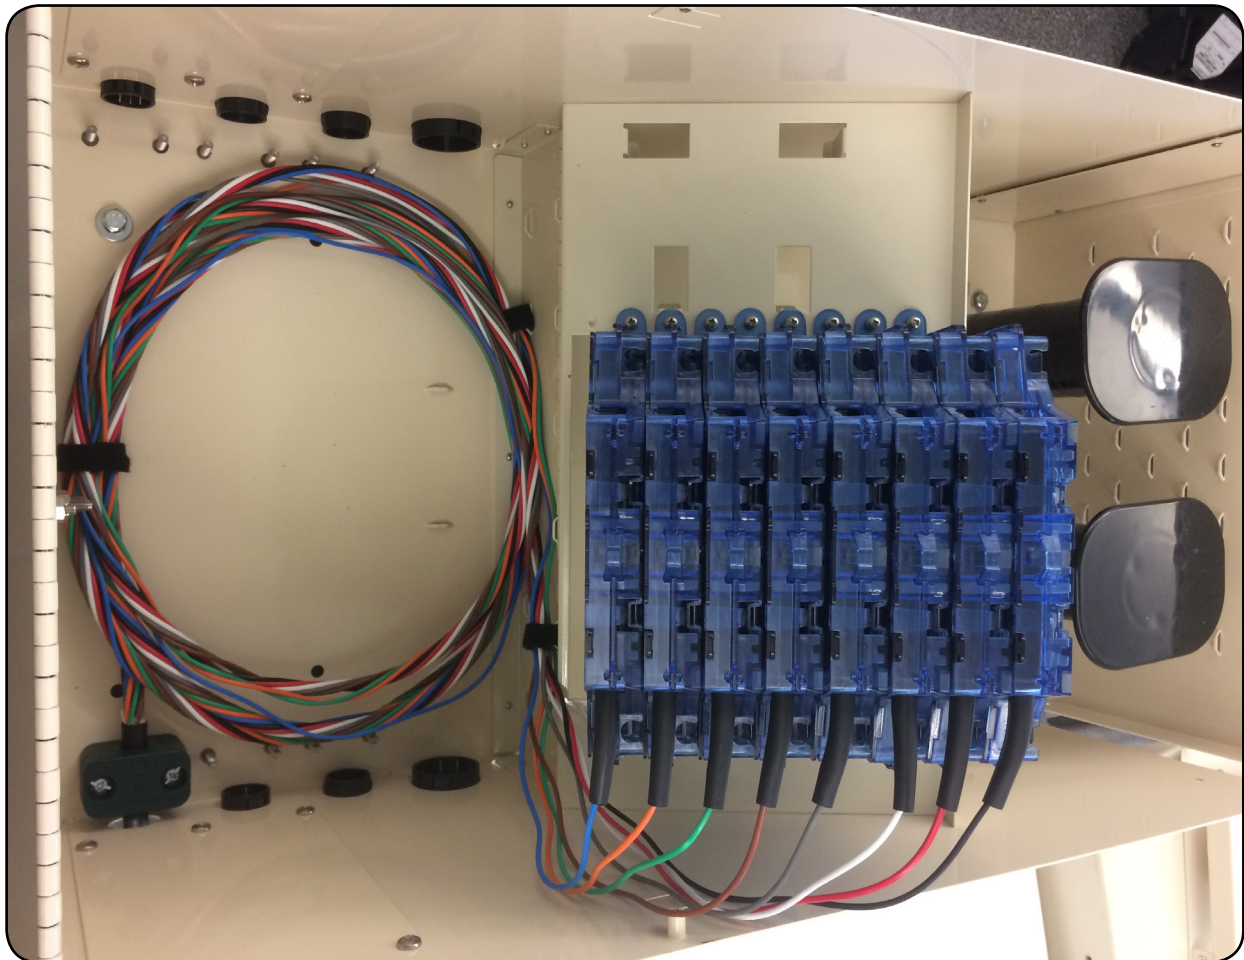

6. Close the bulkhead and use the 7/16" thin wall socket or can wrench to secure the doors closed.

FieldSmart® Fiber Distribution Point (FDP)


36, 96 & 144 Port Indoor Wall Box

Installation Manual



Jumper Installation

1. Access to the jumper side of the wall box is done via the security screw on the right hand side of the wall box.
2. Individual jumpers can be inserted through either the upper or lower hole in the enclosure. You may want to wrap the group of jumpers with some grommet tape to protect them from the edge of the sheet metal at the opening.
3. Store the slack from the jumpers on the slack management spools provided. It is recommended that the jumpers leave the radius spools toward the back wall opposite the cable entrance, and then transition forward to the adapters. This will allow for proper jumper swing if the bulkhead is opened. The slack can then be dressed up using the supplied Velcro strips.

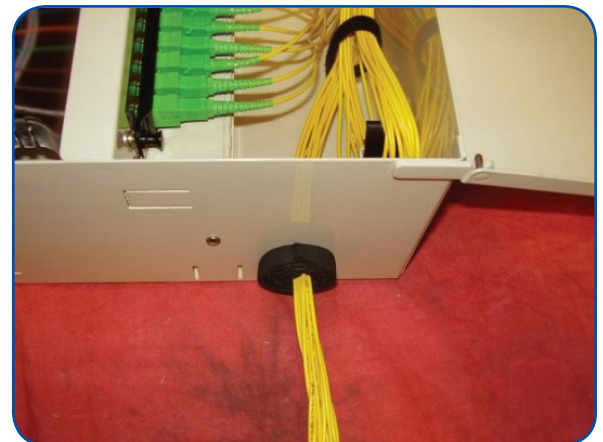



FieldSmart® Fiber Distribution Point (FDP)



36, 96 & 144 Port Indoor Wall Box

Installation Manual

PON Splitter Installation

96 Port/Standard 144 Port Indoor Wall Box

1. Attach the provided 2" x 2" velcro square with adhesive backings to the splitter body and the inside of the wall box.

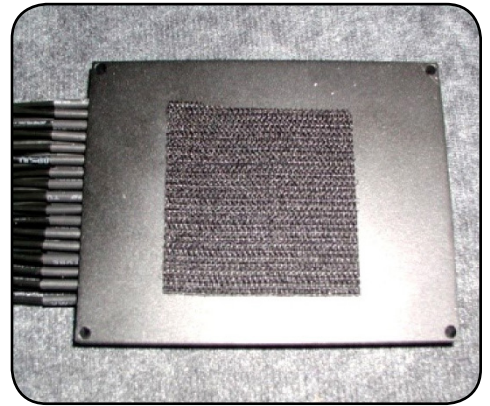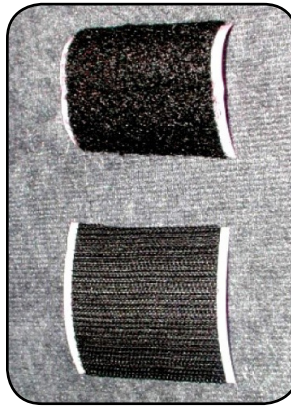


2. Secure the splitter body into place on the bottom of the wall box with the velcro.



PON 144 Port Indoor Wall Box

3. Place the splitter body in the splitter cage located on the bulkhead.

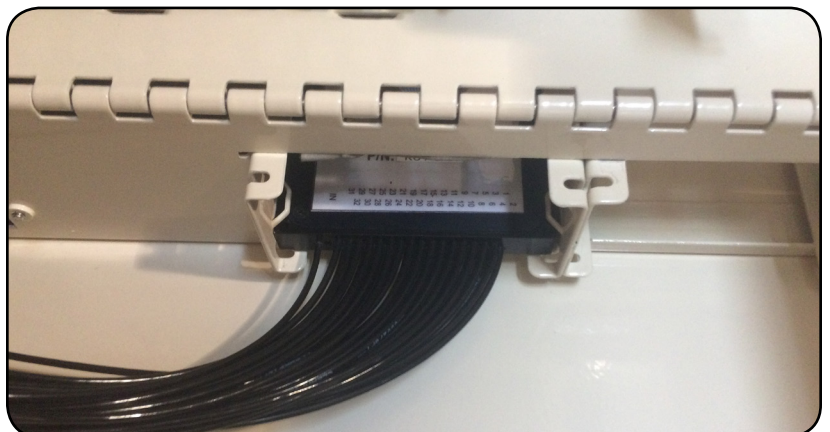

FieldSmart® Fiber Distribution Point (FDP)

36, 96 & 144 Port Indoor Wall Box

Installation Manual



4. Place the staging plate with the foam cradle into the staging plate location at the top of the bulkhead.




96 Port Indoor Wall Box



144 Port Indoor Wall Box

5. Once you have the splitter fully installed, proceed to connecting the feeder leg and distribution legs of the splitter as needed.

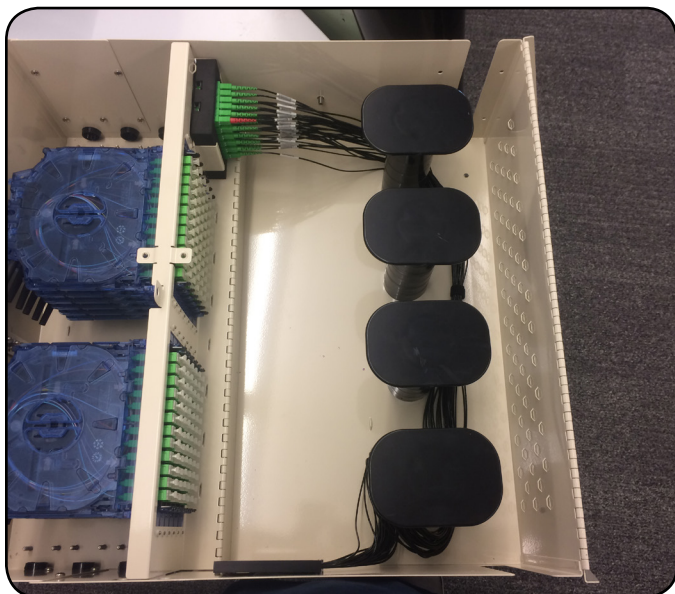



FieldSmart® Fiber Distribution Point (FDP)

36, 96 & 144 Port Indoor Wall Box

Installation Manual

Connector Cleaning Procedure

Whether factory terminated or field spliced, clean connectors are essential for proper system operation. Even the smallest dust particle can cause transmission problems, so for optimal network performance inspect, and if necessary, clean connectors and adapters prior to mating.

Inspect Then Connect

These are Clearfield recommended products/applications. Use the product you feel will complete your cleaning procedures. Create a “best practice” for your company and follow those procedures.

The use of Chemtronics end face and bulkhead cleaning products and techniques ensures a clean end face, no matter the type of contamination.

Before cleaning any connector, be sure you know what type of contaminate you are cleaning (dry, fluidic, or combination). All the available products are good, it's the process that you need to be aware of. Using a dry cleaning method to clean “dirt” can lead to scratching of the end face. Learn the process of cleaning properly.

Note: It is **NOT** recommended to use isopropyl alcohol to clean the end face.

Cleaning an SC/LC Connector

Cleaning the End Face

- Place one wiping paper on QbE-2 FiberSafe™ Cleaning Platen. (Figure 1)
- Apply small amount of precision cleaner (about 1” in diameter) with Electro-Wash MX pen on to one end of the wipe. (Figure 2)
- Hold end face at a 90 degree angle. For APC connection, adjust by slightly tilting the container or end face. Angle is correct when no drag is felt on the end face. (Figure 3)
- Draw end face from wet to dry part of the wipe 3 times. Use just enough pressure to ensure complete contact between end face and the wipe.

Note: **DO NOT** retrace previous step.



Figure 1



Figure 2



Figure 3

FieldSmart® Fiber Distribution Point (FDP)

36, 96 & 144 Port Indoor Wall Box

Installation Manual



Cleaning the Ferrule

- Lightly moisten the fiber optic swab (2.5mm/38542F or 1.25mm/38040) by spotting a small amount (about 1") of Electro-Wash PX or Electro-Wash MX pen onto the QbE. Hold the swab, 1 side down to the wetted area and hold for a count of 1-2-3-4-5. (Figure 4)

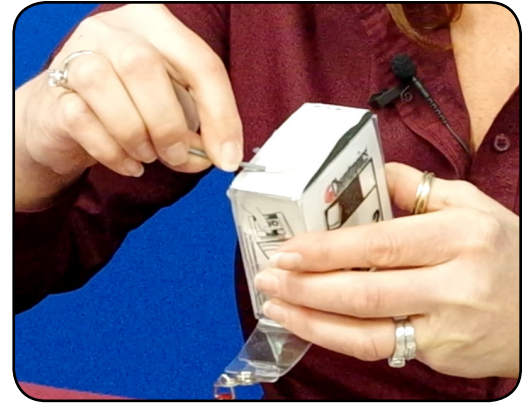


Figure 4

- Insert swab into side of ferrule, wet side to the ceramic ferrule and circle around 2-3 times and remove. Turn swab to dry side and repeat. (Figure 5)



Figure 5

Cleaning the Mate Through an Adapter AND the Adapter Itself

- Lightly moisten the fiber optic swab (2.5mm/38542F or 1.25mm/38040) by spotting a small amount (about 1") of Electro-Wash PX or Electro-Wash MX pen onto the QbE. Hold the tip of the swab onto the wetted area and hold for a count of 1-2-3-4-5.
- Insert the swab into the adapter to the connector, press lightly against the connector, twist 2-3 times, remove and discard.
- Dry with a second dry swab.
- Inspect, repeat cleaning if necessary, and test for signal strength.
- Use additional swabs to clean inside the actual adapter. Moisten swab, like above, and insert through hole and remove while twisting. (Figure 6)

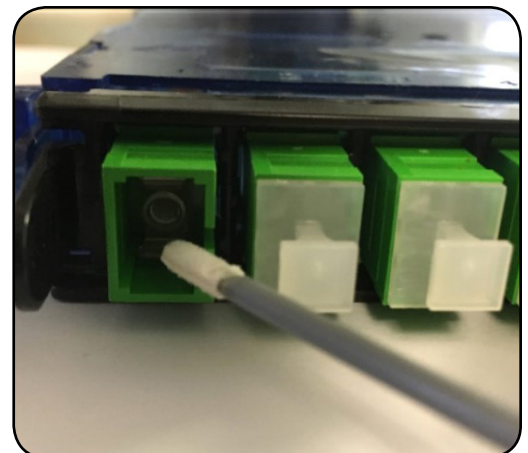


Figure 6

Cleaning an MPO/MTP Connector

Female Connector

- Place one wiping paper on QbE-2 FiberSafe™ Cleaning Platen and apply small amount of precision cleaner (about 1" in diameter) with Electro-Wash MX pen on to one end of the wipe. **(Figure 1)**



Figure 1

- Hold end face at a 90 degree angle. For APC connection, adjust by slightly tilting the container or end face. Angle is correct when no drag is felt on the end face. **(Figure 2)**

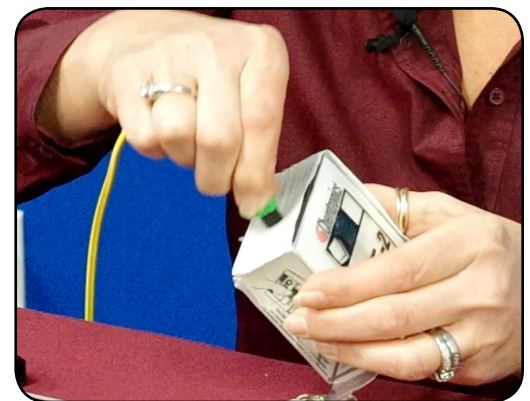


Figure 2

Male Connector

- Lightly moisten one side of the fiber optic swab (CC505F) by spotting a small amount (about 1") of Electro-Wash PX or Electro-Wash MX pen onto the QbE. Hold the swab, 1 side down to the wetted area and hold for a count of 1-2-3-4-5.
- Place swab, wet side down, at one end of connector end face and draw across in a diagonal sweep; i.e., from fiber 1 up and across to fiber 12. Turn swab over to dry and draw back from fiber 12 to fiber 1. **(Figure 3)**



Figure 3

FieldSmart® Fiber Distribution Point (FDP)

36, 96 & 144 Port Indoor Wall Box

Installation Manual



Standard Warranty

Clearfield warrants to the original purchaser of the Product sold hereunder is free from defects in material and workmanship under normal use and service, subject to exceptions stated herein. Product purchased is warranted as follows: Clearfield designed and branded Products are warranted for three (3) years; Products manufactured by Clearfield to customer prints and/or specifications are warranted for one (1) year; and any Product Clearfield acquires from or through a third-party manufacturer or distributor and resells to Customer as the original customer will carry the manufacturer's pass-through warranty, if any. In all cases, the warranty period commences on the date of shipment to the original purchaser.

Warranty Claim Procedure

If any Product purchased from Clearfield is found defective under the above warranty, the following basic procedure must be followed:

1. Customer must contact Clearfield and obtain a Return Materials Authorization
2. Following authorization, the Customer ships the product-freight collect-to Clearfield's manufacturing facility
3. Clearfield shall repair or replace the defective Product at its sole option and discretion, and return the repaired or replacement Product to Customer's site, freight prepaid

Note: If the Product is not found to be defective by Clearfield, the product will be returned to the Customer and the customer billed for freight in both directions.

View our warranty policy here: <https://www.seeclearfield.com/warranty.html>

Limitations of Warranty

Correction of defects by repair or replacement, at the option of Clearfield Inc, shall constitute the exclusive sole remedy for a breach of this limited warranty. Clearfield shall not be liable under any circumstances for any special, consequential, incidental, punitive, or exemplary damages arising out of or in any way connected with the product or with agreement to sell product to buyer, including, but not limited to damages for lost profits, loss of use, or for any damages or sums paid by buyer to third parties. The foregoing limitation of liability shall apply whether the claim is based upon principles of contract, warranty, negligence or other tort, breach of statutory duty, principles of indemnity or contribution, the failure of any limited or exclusive remedy to achieve its essential purpose, or otherwise.

Clearfield will not be responsible for any labor or materials costs associated with installation or incorporation of Clearfield products at customer sites, including any costs of alteration, replacement or defective product, or any field repairs.

Other Limitations

Clearfield assumes no warranty liability regarding defects caused by:

1. Customer's modification of Product, excepting installation activities described in Clearfield documentation
2. Customer re-packaging of Product for shipment to third parties or destinations other than those originally shipped to by Clearfield, or any defects suffered during shipping where the Product has been re-packaged
3. Customer's installation or maintenance, excepting activities described in and performed in accordance with Clearfield documentation
4. Customer's improper or negligent use or application of Product
5. Other causes external to the Product, including but not limited to accidents, catastrophe, acts of God, government action, war, riot, strikes, civil commotion, sovereign conduct, or the acts or conduct of any person or persons not party to or associated with Clearfield
6. Environmental factors and weathering resulting in aging and damage not necessary or applicable to the function of the product



FieldSmart® Fiber Distribution Point (FDP)

36, 96 & 144 Port Indoor Wall Box

Installation Manual

Proprietary Notice

About FieldShield Product Line Application

Information contained in this document is copyrighted by Clearfield, Inc. and may not be duplicated in full or part by any person without prior written approval of Clearfield, Inc.

Its purpose is to provide the user with adequately detailed documentation to efficiently install the equipment supplied. Every effort has been made to keep the information contained in this document current and accurate as of the date of publication or revision.

However, no guarantee is given or implied that the document is error free or that it is accurate with regard to any specification.

Technical Support

Clearfield, Inc. can be contacted for any issues that arise with the supplied product.

If you need to return the supplied product, you must contact the Clearfield, Inc. Customer Service Department to request a Returned Materials Authorization (RMA) number.

Clearfield, Inc.
7050 Winnetka Ave N
Minneapolis, MN 55428

Toll Free: 800.422.2537
Phone: 763.476.6866
Fax: 763.475.8457

Customer Support: sales@clfd.net
Technical Support: techsupport@clfd.net